Lecture 06

Telescope Mounts


It's also worth having a quick discussion about different types of telescope mounts. <u>Different mounts</u>

Detecting light

CCD's (outdated, SCMOS detectors taking over!)

The human eye has a very low quantum efficiency (QE) of about 1% (this means around 1 in every 100 photons is actually detected). At optical wavelengths, we typically use CCDs, or charged-coupled devices, for observations. This is due to their very high quantum efficiency, meaning their response is nearly linear - that is, the number of counts you observe is directly proportional to the intensity of light.

They also have very high dynamic ranges - each pixel in a CCD is capable of registering up to ~65,000 counts accurately. Typically, CCD's are Si based. As a photon interacts with a given pixel, it causes excitation of an electron into a conduction band. When finished observing, the accumulation of charge within a pixel can be shifted to an adjacent pixel. As such, an image is read out pixel-by-pixel, as shown below.

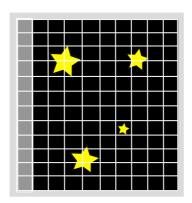

The expected number of photons reaching our detector over a fixed interval of time is N, but the arrival time of each photon is randomly distributed. This means we should get some variation in the number of photons we detect in sequential time intervals. The probability of detecting k photons over a fixed time interval is then given by a Poisson distribution

$$P(k) = rac{N^k e^{-N}}{k!}$$

where k is an integer (because we can't detect half a photon!) but N can be non-integer. This is a probability distribution, meaning we require that

$$\sum_{k=0}^{\infty} P(k,N) = 1$$

It is easy enough to show that for such a distribution, the standard deviation is given by $\sigma=\sqrt{N}$ and that the mean value for $\langle k\rangle=N$. As the expected number of photons, N, grows (by increasing aperture size or exposure time), the standard deviation grows at a slower rate.

Now imagine we wish to measure the signal-to-noise(SNR) ratio of a star. This is given by:

$$SNR = \frac{Signal}{Noise} = \frac{N}{\sigma} = \sqrt{N}$$

This equation only holds true if the only source of noise is due to the statistical fluctuations in the number of photons between exposures. However, when dealing with CCD detectors, we normally have:

- The noise due to N_0 photo-electrons from the source, $\sigma_0=\sqrt{S}_0$
- The noise due to N_b photo-electrons from the background, $\sigma_b = \sqrt{S}_b$
- The noise due to N_d electrons caused by the thermal properties of the CCD, $\sigma_d=\sqrt{S}_d$.
- A time independent readout out noise, $\sigma_R = R$. This is not a square root, and is the standard deviation in the number of electrons measured at the readout step.

Let's assume all of these processes are independent, which allows us to say that the variance of the sum is the sum of the variances, $\sigma_{\text{Total}}^2 = \sigma_0^2 + \sigma_b^2 + \sigma_d^2 + \sigma_R^2$. As such, the noise term, $N = \sigma_{\text{Total}}$, is given by

$$N = \sqrt{S_0 + S_b + S_d + R^2}$$

and thus the Signal-to-Noise ratio is given by

$$SNR = \frac{S_0}{\sqrt{S_0 + S_b + S_d + R^2}}.$$

This is the most basic form of this equation, but it can become significantly more complicated. This is because the equation uses the number of electrons liberated in a pixel by incoming photons (which isn't necessarily a 1-1 conversion), while normally we have an estimate of the number of photons which we are expecting to arrive at our detector. Also, the total number of photons from the source are normally spread over several pixels, but the background is normally reported as photons/pixel - meaning you'd need to multiple N_b by the number of pixels which N_0 is spread over to get the units right.

There are 3 limiting cases for the basic form of the equation.

1. **Object limited:** $S_0 >> S_b, S_d, R^2$. In this case, the equation simplifies to $SNR = \frac{S_0}{\sqrt{S_0}} = \sqrt{S_0}$. Since the number of counts detected, S_0 , is proportional to time, then $SNR \propto \sqrt{t}$. This means you eventually get

diminishing returns on increasing your exposure time. Additionally, S_0 is proportional to D^2 , where D is the aperture of the telescope. As such, SNR $\propto D$.

- 2. **Background limited:** $S_b >> S_0, S_d, R^2$ In this case, we get $SNR = \frac{S_0}{\sqrt{S_b}}$. Both S_0 and S_b scale the same way with exposure time and telescope aperture, and the SNR scales the same as in the above. For fixed S_0 , the SNR scales with the square root of the background signal so if your background increases (because for example the moon rises), the SNR drops. This is important in determining when to observer your targets can they withstand a bright moon, or do you need no moon at all?
- 3. **Read noise limited:** $R^2 >> S_0, S_b, S_d$ Read noise is indepedant of exposure time, so this typically only occurs for short exposures. $\mathrm{SNR} = \frac{S_0}{R}$. In this regime, since \$R is time independant, SNR scales linearly with time and with the square of the aperture.